

# Instruction 168: Replacing the battery in the Keyless-Go key

## Information

<b>ID</b>	AN168E
<b>Version</b>	1.0
<b>Created</b>	2019-10-22 / Isabel Bertsch
<b>Edited</b>	-/-
<b>Released</b>	2019-10-22 / Flurin Vicentini
<b>Status</b>	Released
<b>Category</b>	Public
	Subject to technical modifications. Copying permitted only with express permission of KYBURZ.
<b>Applicable to</b>	DXP, DXS
<b>Performed by</b>	C partner, customer
<b>Time required</b>	1 min.
<b>Maintenance plan item</b>	-
<b>Description</b>	This instruction describes how to replace the battery of the Keyless-Go key.
<b>Important information</b>	⚠

## 1 Tools & material required

### Tool


Quantity	Description	Art. no.
1	Flat-headed screwdriver	--
1	Coin	--

### Material

Quantity	Description	Art. no.
1	CR2450 battery for Keyless-Go remote operation	616161.00

**2 Description**

	<p><b>Step 1</b></p> <p>Insert the screwdriver (1) or alternatively a coin (2) sideways into the slot. Open the cover (3) by turning it left or right.</p>
	<p><b>Step 2</b></p> <p>Remove the cover (3). Hold the key ring (4) in position or remove it.</p>

	<p><b>Step 3</b></p> <p>Slide out the battery (5) sideways from the clamping device.</p>
	<p><b>Step 4</b></p> <p>Installation is carried out in reverse order to removal.</p>
	<p><b>Step 5</b></p> <p>Test function.</p>